

Programming steps to the Hills Reliance NX4 V2 Control panel working in conjunction with RDC transmitters.

Connecting the transmitter to the panel:

Connect the R (RING) wire to the transmitter negative. Connect the T (TIP) wire to the transmitter CID connection. Power the transmitter directly from the battery.

Entering programming:

Press * 8 9 7 1 3

Installer code

Press 0 #

Programming of the control panel module.

Programming the communicator:

Feature –	Press 4 #	1 *	(1 st digit of the telephone number)
		2 *	(2 nd digit of the telephone number)
		3 *	(3 rd digit of the telephone number)
		4 *	(4 th digit of the telephone number)
		14 * #	(Termination of the telephone number)
	Press 5 #	1 *	(1 st digit of then account number)
		2 *	(2 nd digit of the account number)
		3 *	(3 rd digit of the account number)
		4 * #	(4 th digit of the account number)
	Press 6 #	1 * #	(Selecting the value 1 of Contact ID)

Program AWAY arming and disarming only:

(Note that Zone 7 locations has been used as an example)

Feature - Press 18 #***** by pressing * 7 times, you can go to segment 7 for Zone.

Press 30 * # 30 is the value for a momentary key switch arm/disarm

Note, for the panel to instantly arm via the key switch zone, the exit delay time should be set to zero in Feature 17 segment 2

To exit and save programming:

Press EXIT

