

Programming steps to the TEXECOM 832/412 Control panel working in conjunction to RDC transmitters.

Connecting the transmitter to the panel:

Connect the R (RING) wire to the transmitter negative. Connect the T (TIP) wire to the transmitter CID connection. Power the transmitter directly from the battery.

Entering programming:

Press 1 2 3 4 MENU 9

Programming the communicator:

Press 70 for UDL and DIGI options

Ensure the following is on

1 for Enabling the comms

2 for dialling in DTMF

5 for Auto test

8 for Blind dialling

Press yes/arm to save

Press 71 for ARC no.1 settings

Press 0 for the programming of the tel. no

Press 1 2 3 4 yes/arm

Press 1 for the programming of the account code

Press 1 2 3 4 yes/arm

Press 2 for the reporting protocol option

Press 4 to select Contact ID

Press 3 for programming the dialling attempts

Press 3 as this is the default value

Press 4 for selecting the reporting partitions

Ensure the relevant partitions in use are displaying on the keypad. If it's not displaying, press 1 or 2 or 3 or 4 and switch them on. Press yes/arm to save.

Press 5 for selecting the relevant reporting event

As default all options are already elected

Press 8 for selecting the protocol options

Press 2 as this should be on for single events. Press yes/arm to save

Press menu to back into the main location

Programming zone arming and disarming:

(Note that Zone 7 and 8 have been used as an example)

AWAY arming

Go into programming

Press 11	This location is to program any zone
Press 08	This is to select zone 8
Press 16	This to select the zone option for key switch arming/disarming. Press MENU to go back to the main location

Note that in Location 14 FORCE ARMING should be enabled on all zones, this option default is off.

Press 15	This is to set the zone attributes
Press 08	This is to select zone 8
	Press 3 as this will enable instant AWAY arming on zone 8 key switch. Press yes/arm
	Press MENU to go back to the main location
	Note that the exit delay need not to be programmed as this will instantly arm the system in away mode

STAY arming

Go into programming

Press 11	This location is to program any zone
Press 07	This is to select zone 7
Press 16	This to select the zone option for key switch arming/disarming. Press MENU to go back to the main location
Press 38	Miscellaneous 1
Press 4 & yes	Ensure that 4 is off so that STAY arm/disarm can be reported

Note that in Location 14 FORCE ARMING should be enabled on all zones, this option default is off.


Press 15	This is to set the zone attributes
Press 07	This is to select zone 7
	Press 4 as this will enable instant STAY on zone 7 key switch. Press yes/arm
	Press MENU to go back to the main location

Note that the exit delay need not to be programmed as this will instantly arm the system in STAY mode

To exit and save programming:

Press 99 #

DEOL Wiring

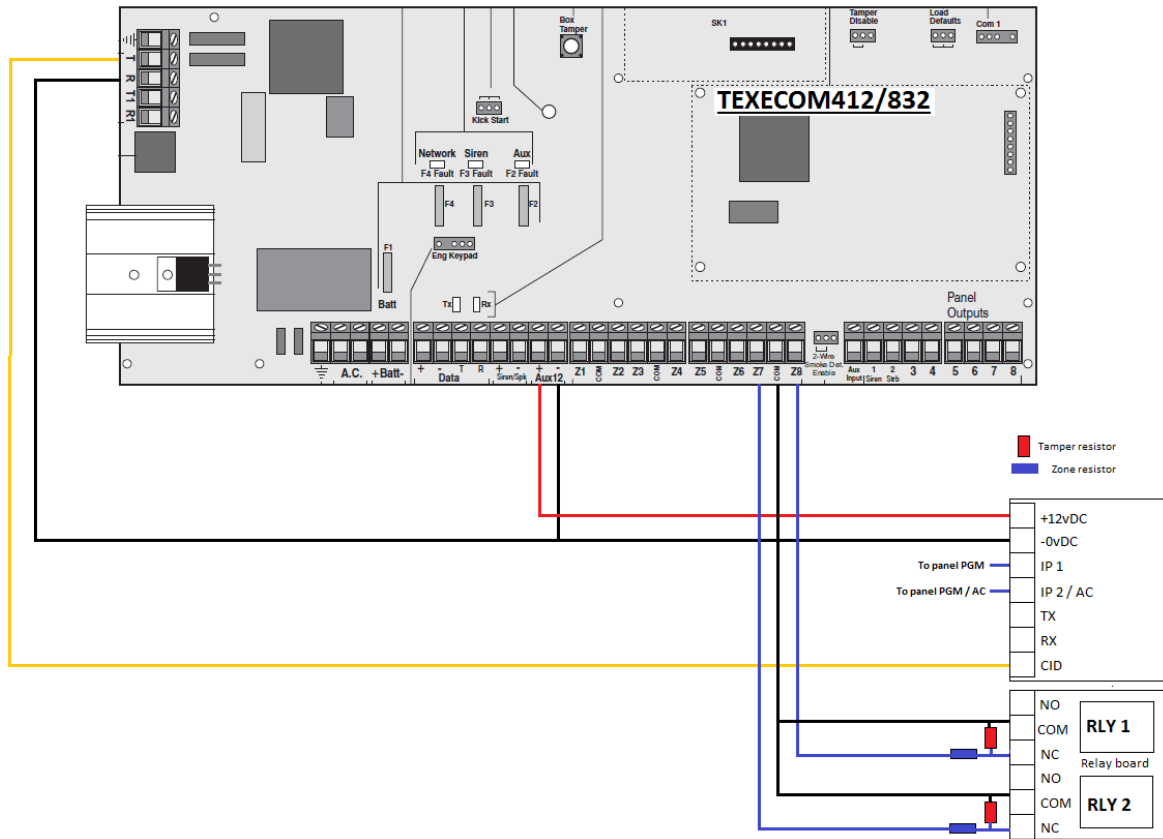

SEOL Wiring

