

CADDX NX8 V2 Programming Steps

Wiring the Dialler board

- Connect TIP on the alarm panel to the CID input to the unit
- Connect RING on the alarm panel to the NEGATIVE to the unit
- Connect the power of the RDC unit directly to the 12v7amp battery using a RDC – BTE7 battery extender board

Please follow these steps in programming the panel to contact ID

Step 1

Location 0 enter the following ->

Segment 1 = 15

Segment 2 = 1

Segment 3 = 2

Segment 4 = 3

Segment 5 =4

Segment 6=14

Step 2

Location 1

Enter 1234 into segments 1234 respectively

Step 3

Location 2

Enter a 1 for Ademco contact ID

Step 4

Location 5

Enable Partition 1 to report to phone nr 1

Step 5

Location 23

Segment 3 enable 1&2 for openings and closings and zone bypass reporting


Step 6

Location 88

Enter 1234 into segments 1234 respectively again for the account code in partition 1

DEOL Wiring

CADDX NX8 V2

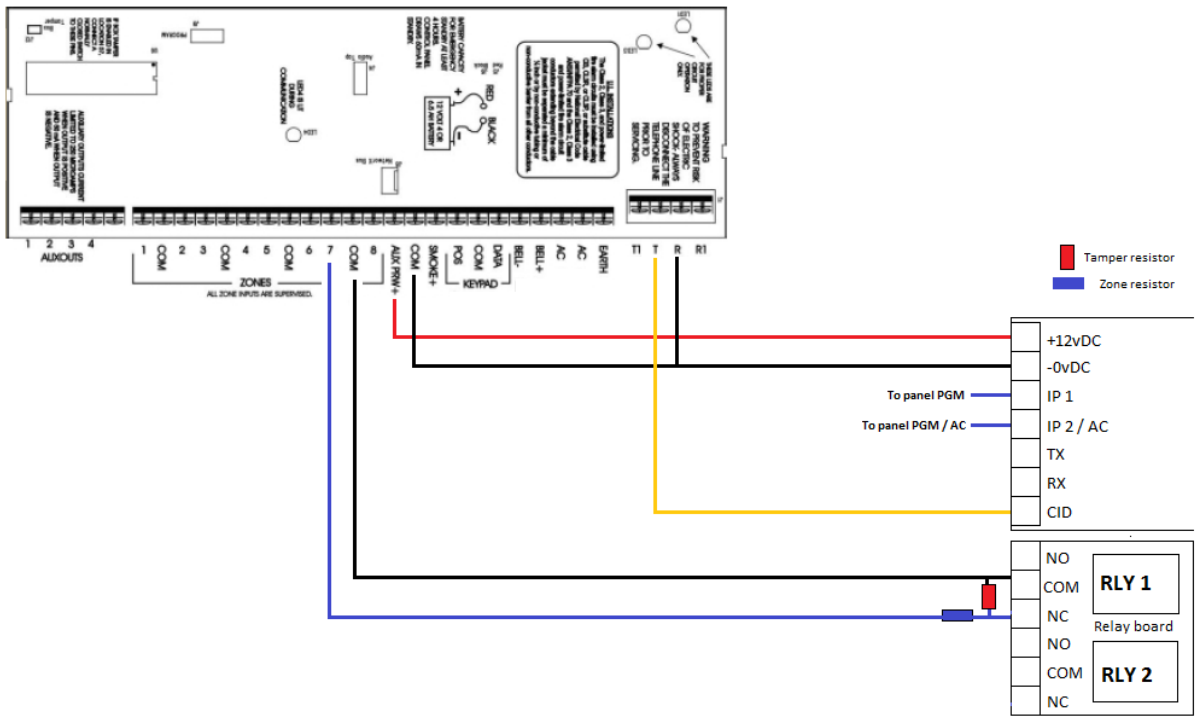

SEOL Wiring

CADDX NX8 V2

